


PLAN

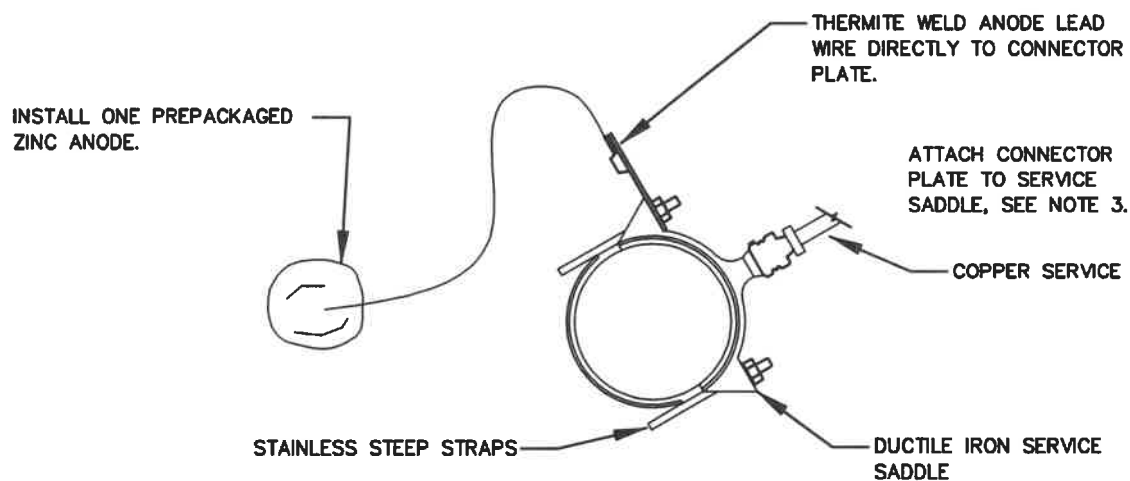

SECTION VIEW

NOTES:

1. CONNECTOR PLATE TO BE THERMITE WELDED TO ANODE LEAD WIRE PRIOR TO ATTACHING CONNECTOR PLATE TO SERVICE SADDLE.
2. ANODES PLACED AT SAME DEPTH AS THE BOTTOM OF PIPE AND AT A MINIMUM OF 12" FROM EDGE OF PIPE.
3. REMOVE COATING FROM SERVICE SADDLE WHERE CONNECTOR PLATE IS TO BE MOUNTED. REMOVE COATING IMMEDIATELY PRIOR TO ATTACHING THE CONNECTOR PLATE.
4. DO NOT THERMITE WELD TO PVC PIPE.
5. SEE SPECIFICATION FOR ANODE SIZE.

WASHINGTON
SUBURBAN
SANITARY
COMMISSION

APPROVED: 7-26-21

Mike Hammer

Chief Engineer

STANDARD DETAIL

PVC AWWA C-900 PIPE
SERVICE SADDLE

C
7.10